

SPIRETTI - SPIRAL VEGETABLE AND FRUIT SLICER

USE INTRUCTIONS



Place the slicer on a smooth horizontal surface and press the unit down gently on all four suction feet to secure the slicer. Slicer should feel solidly secure before operation.



Select a blade. The slicer comes with three blades. They can create thin spaghetti like cuts to thicker cuts.



Slide the selected blade plate into the unit and apply downward pressure to ensure that it is securely in place.
Note: the blade must face the spikes of the food holder. (The blades do not require adjustment and should not be touched.)



Attach the desired fruit or vegetable to the food holder ensuring that the food is firmly penetrated by the spikes. Press the other side of the chosen food onto the steel spindle on the blade plate. For best results, cut off each end of the vegetable being sliced to provide a secure grip.



Firmly grip the handle and push the assembly forward whilst simultaneously rotating the food holder with the crank. Apply pressure to the lower handle mount and not the crank for this purpose. Vegetable and/or fruit strips will emerge on the opposite side of the blade.



Store the unused blades inside the base.

DISASSEMBLY AND CLEANING

- Grip the blade plate and lift vertically to remove it from the unit. Take care to keep fingers well away from the blade.
- Remove the spiked gripping head and crank assembly by sliding the componentry in a horizontal direction until it is free from the unit.
- Rinse off food residue and hand wash components in warm water and mild dishwashing detergent.
 - Dry blade plate thoroughly with a soft cloth.
- Whilst the product is dishwasher safe, hand washing is recommended.

Avanti® is a registered trademark of
Sheldon and Hammond Pty. Ltd. A.B.N. 90 076 567 989
Product made in China to rigid specification utilising
high-grade materials. Packaging designed in Australia,
©Copyright Sheldon and Hammond Pty. Ltd. 2015.

Due to our commitment to ongoing product improvement,
the style and finish of the item enclosed may differ slightly to the example pictured on the packaging.

Product Code 12638

www.avantihomewares.com