



5KMT3115
5KMT5115



KitchenAid







English	5
Deutsch	19
Français	33
Italiano	47
Nederlands	61
Español	75
Português	89
Ελληνικά	103
Svenska	117
Norsk	131
Suomi	145
Dansk	159
Íslenska	173
Русский	187
Polski	201
Český	215
Türkçe	229
العربية	243







TABLE OF CONTENTS

PARTS AND FEATURES 6
 Parts and accessories..... 6

TOASTER SAFETY 7
 Important safeguards 7
 Electrical requirements 10
 Electrical equipment waste disposal 10

USING THE TOASTER 11
 Function buttons..... 11
 Getting started 11
 Toasting 12
 Toasting bagels..... 12
 Defrost 13
 A little longer..... 14
 Reheat..... 14

CARE AND CLEANING 15
 Cleaning the Toaster..... 15

TROUBLESHOOTING 16

WARRANTY AND SERVICE 17

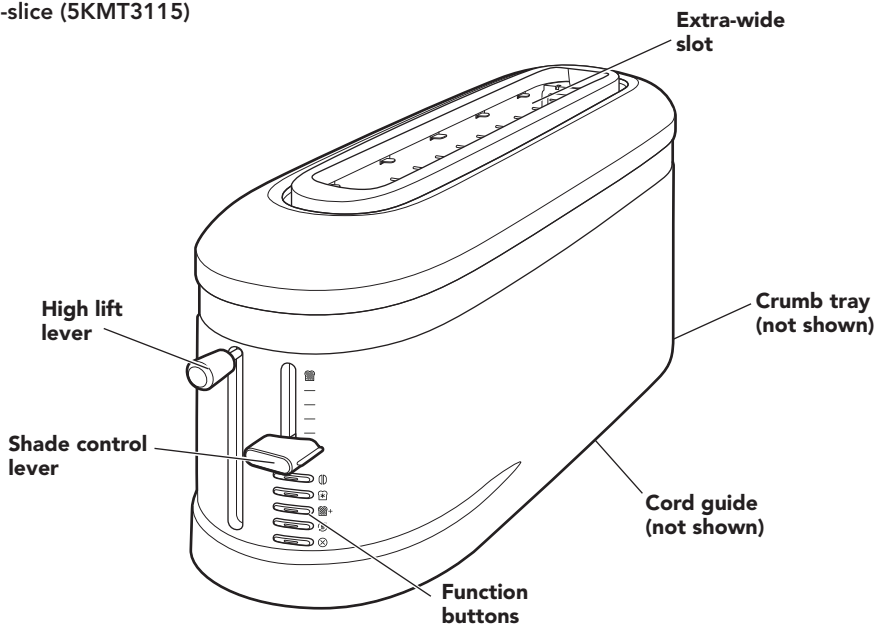 




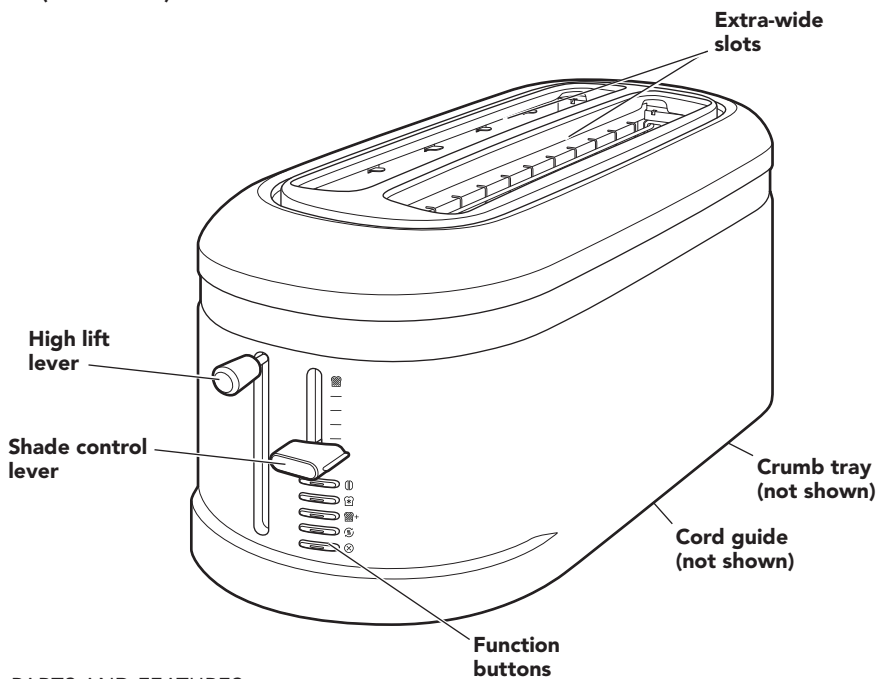 
PARTS AND FEATURES

PARTS AND ACCESSORIES

2-slice (5KMT3115)



4-slice (5KMT5115)





TOASTER SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.” These words mean:

⚠ DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

⚠ WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.
2. Do not touch hot surfaces. Use handles or knobs.
3. The appliance must not be immersed. To protect against electrical shock do not immerse cord, plugs or appliance in water or other liquid.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



TOASTER SAFETY

5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. Keep the appliance and its cord out of reach of children less than 8 years.
8. Close supervision is necessary when any appliance is used by or near children.
9. European Union only: Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
10. European Union only: This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
11. This Instruction manual can also be found on the www.KitchenAid.eu or www.KitchenAid.co.uk website.
12. The temperature of accessible surfaces may be high when the appliance is operating.
13. Appliances are not intended to be operated by means of an external timer or separate remote-control system.
14. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
16. Do not operate the Toaster with a damaged cord or plug or after the Toaster malfunctions or is dropped or damaged in any manner. Return the Toaster to the nearest Authorised Service Centre for examination, repair or adjustment.





TOASTER SAFETY

17. Do not use the Toaster outdoors.
18. To disconnect, turn any control to “OFF”, then remove plug from wall outlet.
19. The use of accessories not recommended or sold by KitchenAid may cause fire, electric shock or injury.
20. Do not let the cord hang over the edge of the table or counter or touch hot surfaces.
21. Do not place on or near a hot gas, electric burner or in a heated oven.
22. Do not use appliance for other than intended use.
23. Oversize foods, metal foil packages or utensils must not be inserted in the Toaster as they may involve a risk of fire or electric shock.
24. A fire may occur if the Toaster is covered with or touching flammable material, including curtains, draperies, walls and the like when in operation.
25. Do not attempt to dislodge food when the Toaster is plugged in.
26. Do not operate Toaster unattended.
27. When heating toaster pastries, always use the lightest toast color setting.
28. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
29. Refer to the “Care and Cleaning” section for instructions on cleaning the surfaces in contact with food.
30. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices or other working environments;
 - farmhouses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
31. **WARNING:** To prevent electric shock, unplug before servicing.

SAVE THESE INSTRUCTIONS






TOASTER SAFETY

ELECTRICAL REQUIREMENTS

⚠ WARNING



Electrical Shock Hazard

Plug into an earthed outlet.

Do not remove earth prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Voltage: 220-240 V

Frequency: 50-60 Hz

Wattage: 5KMT3115 900 W
5KMT5115 1600 W


NOTE: If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or technician install an outlet near the appliance.

A short power supply cord (or detachable power supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

ELECTRICAL EQUIPMENT WASTE DISPOSAL

Disposal of packing material


The packing material is 100% recyclable and is marked with the recycle symbol . The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

Scrapping the product

- This appliance is marked in compliance with European Directive 2012/19/EU, Waste Electrical and Electronic Equipment (WEEE).

- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

For more detailed information about treatment, recovery, and recycling of this product, please contact your local city office, your household waste disposal service, or the shop where you purchased the product.





USING THE TOASTER

FUNCTION BUTTONS

			BAGEL Toasts the inside of a cut bagel without burning the bagel's outside surface.
			DEFROST Defrosts and toasts frozen food.
			A LITTLE LONGER Allows you to toast something for just "a little longer".
			REHEAT Quickly reheats previously toasted food.
			CANCEL Cancels the toasting cycle and raises your bread for removal.

GETTING STARTED

Before using your Toaster for the first time, check the extra-wide slots and remove any packing or printed material that might have fallen inside during shipping or handling.

IMPORTANT: To avoid damage to the Toaster, do not probe inside the toaster slots with any metal objects, including utensils.

! WARNING

Electrical Shock Hazard

- Plug into an earthed outlet.**
- Do not remove an earth prong.**
- Do not use an adapter.**
- Do not use an extension cord.**

Failure to follow these instructions can result in death, fire, or electrical shock.

1

Tuck the power cord into the channel of the cord guide on the bottom of the Toaster so that it exits from the rear of the Toaster beneath the crumb tray. Plug into an earthed outlet.

NOTE: You may see light smoke the first time you use the Toaster. This is normal. The smoke is harmless and will soon dissipate.

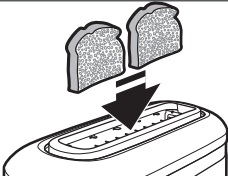 




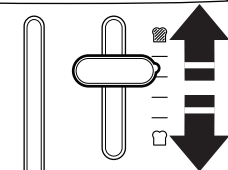 
USING THE TOASTER

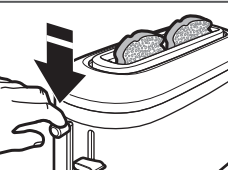 
TOASTING

NOTE: All images shown are of the 2-slice Toaster, model 5KMT3115.

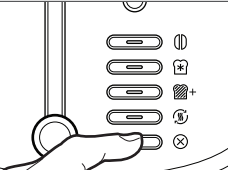 
1		<p>Insert bread or other food to be toasted into the slot(s).</p> <p>TIP: For even toasting, toast only one bread type and thickness at a time. If toasting bagels, be sure to press the Bagel button (☉). See "Toasting bagels."</p>
----------	---	--

NOTE: The age, type, and moisture level of different breads may require different shade settings. For example, dry bread will brown more rapidly than moist bread and will require a lighter setting.

2		<p>Select your desired shade by raising the shade control lever for darker toasting or lowering the lever for lighter toasting.</p>
----------	---	---

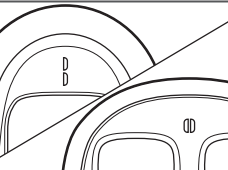 
3		<p>Press down on the high lift lever to start the toasting cycle. The toast will pop up automatically at the end of the cycle and the Toaster will turn off.</p>
----------	---	--

NOTE: If using a function button, you must lower the high lift lever first before selecting the function. The LED light next to the function will be lit while the function is in use.

4		<p>To cancel toasting at any time, press ⊗ (Cancel). The toast will pop up and the Toaster will turn off.</p> <p>TIP: For smaller items, lift up on the high lift lever to raise toast above the top of the Toaster.</p>
----------	---	---

TOASTING BAGELS

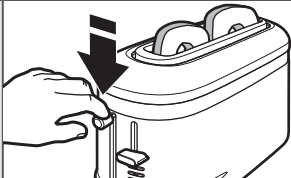 
Your Toaster features a special setting for bagels, ensuring optimal heating time for the best results. The heating elements will adjust to nicely toast the inside of a cut bagel without burning the outside surface.

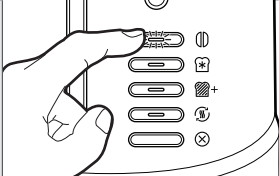 

1		<p>Insert bagels as indicated by the bagel icon on top of the Toaster.</p>
----------	---	--





USING THE TOASTER

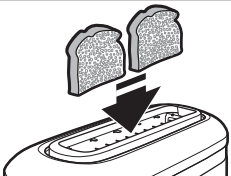 
2  With the shade control lever set to your desired shade, press down on the high lift lever to start the toasting cycle.

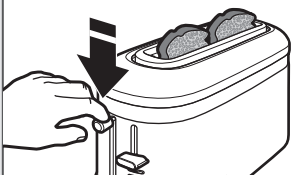 
3  Press ; the Bagel indicator light will glow. The bagel(s) will pop up automatically at the end of the cycle and the Toaster will turn off.

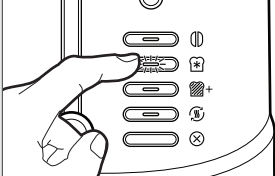 

TIP: The Bagel function can be used at the same time as the Defrost function.

DEFROST

The Defrost function adds extra time to the toasting cycle to defrost frozen items before toasting them.

1  Insert bread or other food to be toasted into the slot(s).

2  With the shade control lever set to your desired shade, press down on the high lift lever to start the toasting cycle.

3  Press ; the Defrost indicator light will glow. The toast will pop up automatically at the end of the cycle and the Toaster will turn off.





USING THE TOASTER

A LITTLE LONGER

This function allows you to toast something for just “a little longer” at the touch of a button without changing your favorite setting. Use this function after the toasting cycle is complete and the toast has risen.

1		Press down on the high lift lever to lower the toast again into the Toaster to resume toasting.
---	--	---

2		Press +. The toast will pop up automatically at the end of the cycle and the Toaster will turn off.
---	--	---

REHEAT

This function allows you to quickly reheat previously toasted foods.

1		Insert the previously toasted food into the slot(s). NOTE: Do not place food with butter or any other topping in the Toaster. Use the Reheat function with dry foods only.
---	--	--

2		Press down on the high lift lever to start the toasting cycle.
---	--	--

3		Press . The toast will pop up automatically at the end of the cycle and the Toaster will turn off, or you may press at any time to cancel the function. NOTE: No shade adjustment is necessary — the Reheat function overrides whatever shade level you have set.
---	--	--






CARE AND CLEANING

CLEANING THE TOASTER

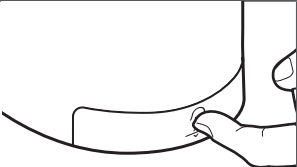 
IMPORTANT: The crumb tray will be hot immediately following a toasting cycle. Allow the Toaster to cool before emptying the crumb tray.

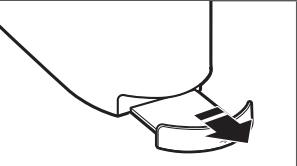 
IMPORTANT: Unplug the Toaster and let it cool before cleaning.

NOTE: For consistent browning results, empty the crumb tray after each use.


1		Wipe the Toaster with a soft, damp cotton cloth. Do not use paper towels, abrasive cleansers, or liquid cleaning products. Do not immerse the Toaster in water.
---	---	---

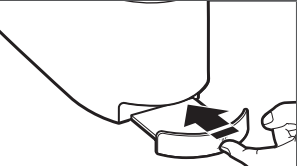 
NOTE: If grease or oil splatters on the Toaster, wipe splatters away immediately using a clean, damp cotton cloth.

2		Press the "push" icon located in the center of the crumb tray.
---	---	--

3		Once the crumb tray has opened slightly, slide it out of the Toaster and shake the crumbs into a waste container.
---	--	---

IMPORTANT: Be sure to open the crumb tray by pressing the "push" icon. Forcing the crumb tray open may damage the crumb tray.

4		The crumb tray should be hand washed only.
---	---	--

5		Replace crumb tray by sliding it back into its slot, and pressing in on the center of the crumb tray until it clicks into place. NOTE: Do not use the Toaster without the crumb tray installed.
---	---	---

NOTE: KitchenAid does not recommend the use of a toaster cover.





TROUBLESHOOTING

⚠ WARNING



Electrical Shock Hazard

Plug into an earthed outlet.

Do not remove earth prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

If your Toaster should malfunction or fail to operate, check the following:

1. Check that the Toaster is plugged into a proper electrical outlet. If it is, unplug the Toaster.
2. Plug in Toaster.
3. If the Toaster still does not work, check the household fuse or circuit breaker.

If the problem cannot be corrected:

See the "Warranty and Service" section. Do not return the Toaster to the retailer; retailers do not provide service.

FOR DETAILED INFORMATION ON USING THE TOASTER

Visit www.KitchenAid.co.uk or www.KitchenAid.eu to download this Instruction manual and to register your Toaster



WARRANTY AND SERVICE

KITCHENAID TOASTER WARRANTY

Length of Warranty:	KitchenAid Will Pay For:	KitchenAid Will Not Pay For:
<p>Europe, Middle East and Africa: For Artisan models 5KMT3115, 5KMT5115: two years full warranty from date of purchase.</p>	<p>The replacement parts and repair labour costs to correct defects in materials or workmanship. Service must be provided by an Authorised KitchenAid Service Centre.</p>	<p>A. Repairs when Toaster is used for operations other than normal household food preparation. B. Damage resulting from accident, alterations, misuse, abuse, or installation/operation not in accordance with local electrical codes.</p>

KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INDIRECT DAMAGES.

CUSTOMER SERVICE

In U.K. and Ireland:

For any questions, or to find the nearest Authorised KitchenAid Service Centre, please find our contact details below.

NOTE: All service should be handled locally by an Authorised KitchenAid Service Centre.

General hotline number:  00800 3810 4026

In other countries:

For all product related questions and after sales matters, please contact your dealer to obtain the name of the nearest Authorised KitchenAid Service/Customer Centre.

For more information, visit our website at:

www.KitchenAid.co.uk
www.KitchenAid.eu



