

# ClickClack®

TOUCH IQ  
COLLECTION

# Now that you've got me... here's how to use me.

NEXT  
GEN.

## TouchIQ 2 Slice Toaster

FULL COLOUR  
HI-RES TOUCH  
SCREEN

4X  
LANGUAGE  
OPTIONS

6X  
BROWNING  
LEVELS

10X  
TOASTER  
PRESETS

24 MONTH REPLACEMENT GUARANTEE



FIRSTLY, LET'S STAY SAFE

**So I can keep working to your high standard, read these safety instructions before using me. They're full of helpful information, so keep them somewhere handy.**

TOUCH IQ  
COLLECTION

**NEXT  
GEN.**



# Key features

The Touch IQ 2 slice Toaster combines sleek design with cutting-edge technology for a perfect toasting experience.

Its high-resolution touch screen display offers effortless control, while the seamless touch and swipe screen toaster creates the perfect level of browning to suit your bread preference. A truly personalized experience. Elevate your kitchen with a toaster designed for both style and performance.

## Full colour hi-res touch screen

Navigate settings effortlessly with a sleek, responsive touchscreen for precise toasting control.

## 10x toaster presets

Perfectly toasts multigrain, gluten-free, bagels, and more with customizable settings for every bread type.

## 6x browning levels

Achieve your ideal toast shade with six adjustable browning options for perfect results every time.

## 4x language options

Easily operate the toaster in English, Spanish, French, or Mandarin, making it simple to use in your preferred language.

---

# Product specifications

Model	Voltage	Wattage	Capacity
CTA001BK & CTA001W	220-240V 50-60Hz	850W	2 Slice

**SAA Approval #:** GMA-526010-EA

# Important safeguards

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

## **1. READ ALL INSTRUCTIONS BEFORE USE!**

2. Check that the voltage in your home corresponds to that stated on the appliance.
3. Do not touch hot surfaces.
4. To protect against electrical shock, fire, or personal injury, do not immerse cord, plugs, or the appliance in water or other liquid.
5. Close supervision is necessary when any appliance is used by or near children. This appliance is not intended to be used by children unless supervised by a responsible adult.
6. Unplug appliance from the outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged. Return the appliance to the nearest authorized service facility or brand owner for examination, repair, or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Not for outdoor use.
10. Do not let the cord hang over the edge of a table or counter. Do not touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Do not use the appliance for anything other than its intended use.
13. Oversized foods or metal utensils must not be inserted in the toaster as they may cause a fire or risk of electric shock.
14. A fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
15. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
16. Do not place any of the following materials in the appliance: paper, cardboard, plastic, tin foils or the like.
17. Do not cover the bread slots as this causes overheating of the toaster.

18. Do not leave unit unattended when in use.
  19. Warning:
    - Do not toast torn slices of bread.
    - Do not place buttered bread or wrapped food into the toaster.
    - Do not toast small-sized bread, mini-baguettes, breadsticks, etc.
  20. When heating toaster pastries, always use the lightest toast color setting.
  21. During toasting, hot air is released through the cooking slot openings. Keep your hands and face at a safe distance from the outlet openings. Also, be careful when removing items from the appliance.
  22. Immediately unplug the appliance if you see dark smoke coming out of the appliance. Wait for the smoke emission to stop before you remove the item from the appliance.
  23. Do not place the appliance against a wall or against other appliances.
  - 24. Leave at least 15 cm of free space on the back, sides and above the appliance for proper ventilation.**
- 

## Caution

- **ALWAYS** place the appliance on a horizontal, level, heat resistant and stable surface.
- This appliance is intended for domestic household use only.
- Always unplug the appliance after use.
- Let the appliance cool down for at least 30 minutes before handling or cleaning it.

**Save these instructions.  
Domestic household use only.**

## Before the first use

- Remove all the packaging materials.
- Check package content to verify it is complete and undamaged. Do not operate the appliance if the content is incomplete or appears damaged. Return it immediately.


### **NOTE:**

- The appliance may produce an odor and/or emit smoke when switched on for the first time, as residues from the production process are eliminated. This is normal and does not indicate a defect or hazard.
- Always use the appliance with the crumb tray.
- When using the appliance for the first time, it is recommended to operate it at least twice on its highest temperature setting until no odor or smoke is present. During use, ensure ample ventilation.
- Let the appliance cool completely.
- Clean the appliance.
- The appliance has a rated power of 850W. Before plugging it into the wall outlet, ensure that the electrical circuit is not overloaded with other appliances. This appliance should always be operated on a separate 220 - 240V - 50Hz - 60Hz wall outlet.
- Do not connect the appliance to a wall outlet unless it is fully assembled and all packaging removed.
- Make sure no food or other objects are inside the toasting slots.
- Place the appliance on a clean, flat and heat-resistant surface.
- When using the appliance on wooden surface, use a heat-resistant mat to protect from damage.

**WARNING:**

- Only use accessories recommended by the manufacturer. Do not use any other accessories with the appliance.
- Do not cover or insert any objects into the air vents.
- Never let the power cord make contact with the housing of the appliance during use.
- Ensure the crumb tray is free of food residues and inserted properly. Never use the appliance without the crumb tray.
- Insert the plug into a wall outlet.
- Remove any protective wrappings from the toast/bagels before placing them in the toasting slots.

# Control panel

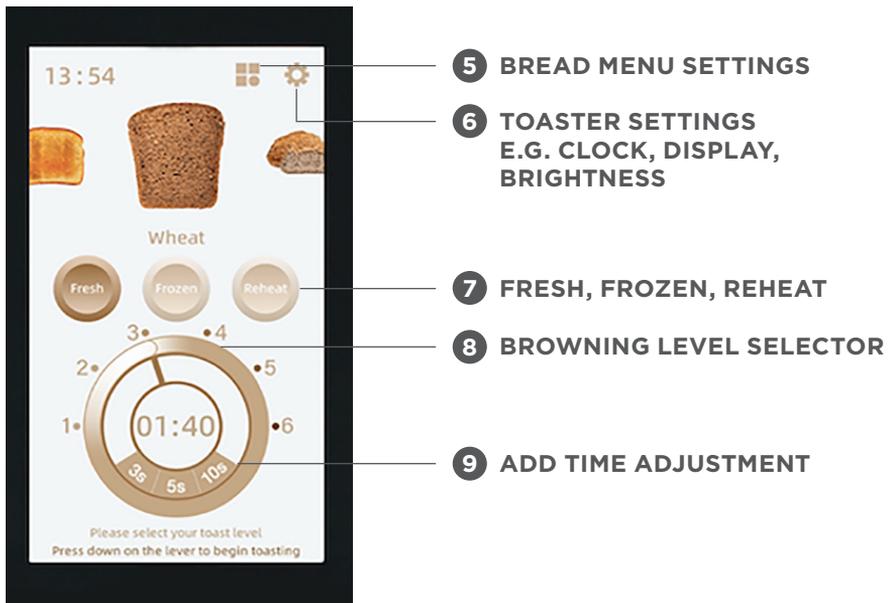


# Toaster TFT Display


This toaster is equipped with a high definition, full color, touchscreen TFT display. You can select any option by pressing but you can also navigate menus by sliding your finger on the display.

## 1. Selecting the bread type and ideal toasting time

To select a type of bread, either do a horizontal slide to get to the next selection, or press on the Bread menu icon, and select which type of bread you want to toast. Access the second main menu page with a vertical slide.

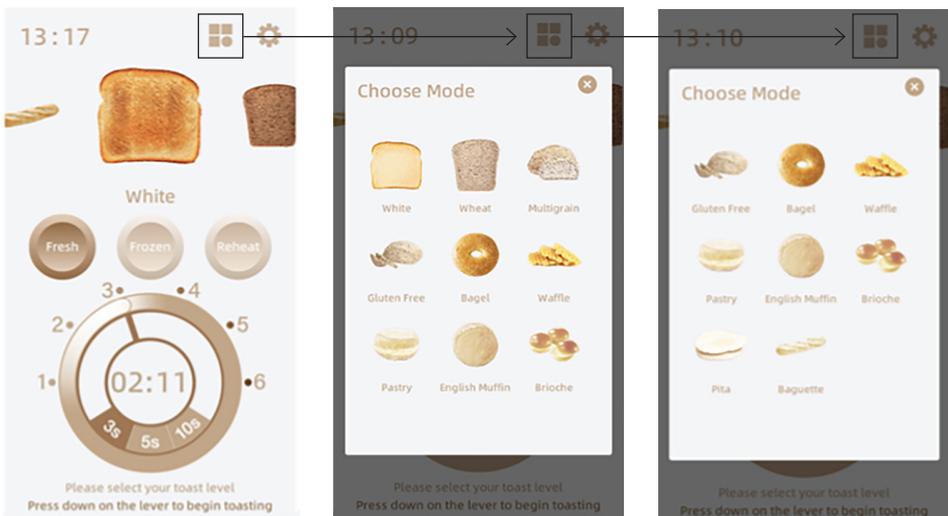


You can adjust the toasting time automatically by selecting if a bread is fresh (room temperature), frozen, or if a piece of bread previously toasted just needs to be reheated.

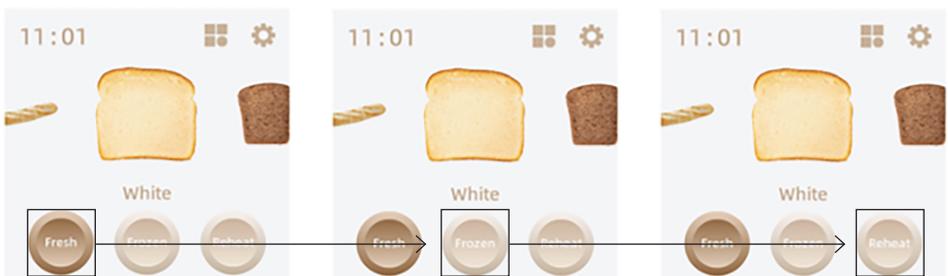

**You can adjust the browning level by sliding the cursor from level 1 (lightest) to 6 (darkest).**

**IMPORTANT:** Browning results can differ significantly between brands, as no bread recipe uses the same content of ingredients like sugar, water or preservatives, all which influence browning. If the toast level produces too much or too little color, you can adjust the browning time for each level to match your preference. Use the +3,5,10 seconds controls around the toasting time to fine-adjust, by increments, until you find the perfect setting for your type of bread.

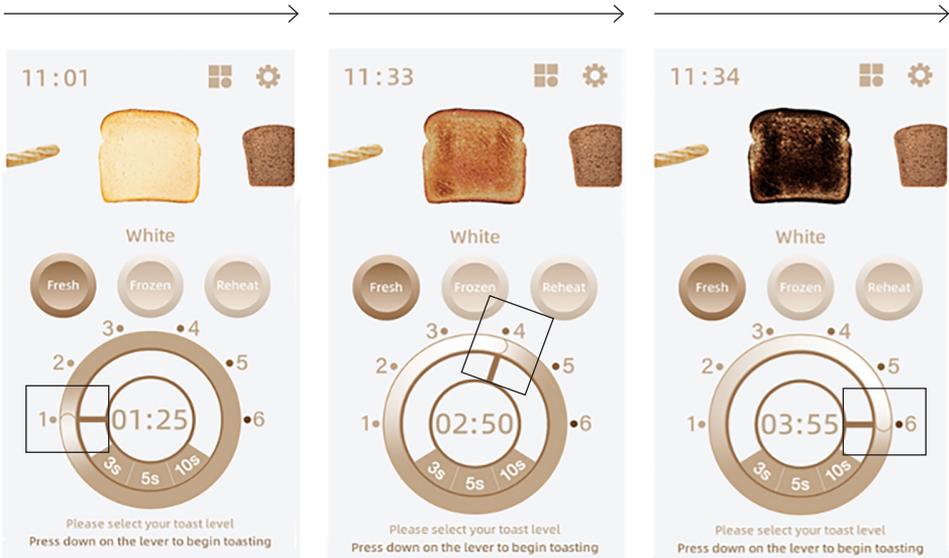

## 2. Operation mode



To start the toaster after selecting all parameters, simply press on the toast lever. The countdown timer will start. You can cancel the toasting at any time, by pressing the cancel button.



## 3. Clock screensaver


This toaster is equipped with a clock screensaver (see "Parameters" for setup and clock adjustments).

If no operation is detected for a period of time, the clock will be displayed. You can select from Analog, digital 12-hours or digital 24-hours (military time). After a certain time, the toaster will return to standby mode (black display). Just press anywhere on the display to wake up the toaster.

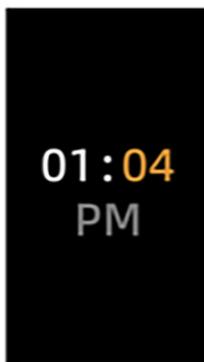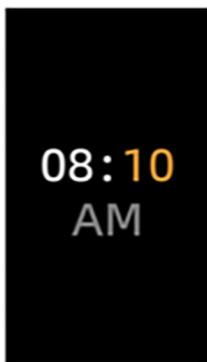

## 4. Settings

Press on the Settings icon on the top right of the display. This menu will allow you to adjust sound, display color (bright mode or dark mode), the language (English, Spanish, French or Chinese), display brightness, and chose the clock mode or adjust the clock.

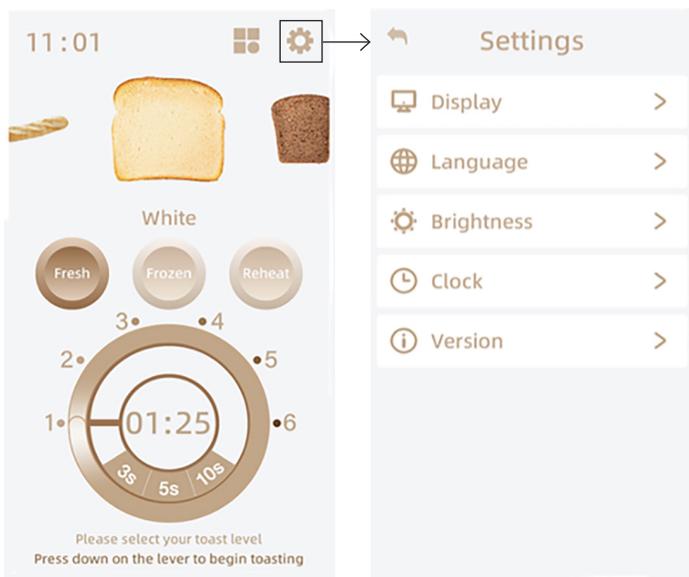

---

## Important

Factors such as bread size, thickness, height, temperature, and most of all, moisture, preservative or sugar content, can all affect the evenness and the degree of browning.

The browning levels provided are indicative only. To ensure consistent results, use the free-adjustment function to results to the reference toast picture and the favorite function to keep your favorite settings in memory.

- If your bread gets squished during the toasting process, it may result in uneven browning, leaving some spots white and soft and some brown and crisp.
- If toasting multiple rounds of slices back-to-back, toasting time will be automatically adjusted/reduced for optimal results. This allows the user to still achieve the shade of their choice when the unit is already hot.

- This appliance can be used to toast plain, fresh or frozen toast/bagels and toaster pastries. Do not use for any other foods than the one displayed. Never place or insert any objects in the toasting slots.
- After plugging the toaster, the display will light up and display a short animation.
- Choose between the 6 levels of toast, or the toaster pastry setting, and touch the desired shade, according to your preferences on how dark you like your toast.
- Press the toasting lever down, until it locks in place to switch the heating elements on.

**NOTE:**

- The toasting lever will only remain in the downward position if the appliance is connected to an energized wall outlet.
- To stop or interrupt any cycle, touch the CANCEL button. The toasting lever and contents will pop up.
- Do not force the toasting lever up. Always use the CANCEL button to switch the appliance off.

**DANGER OF BURNS:**

Always pay special attention when placing or removing contents from the toasting slots. Toasted food and toasting slots get hot, pay attention when removing toasted food. Use suitable non-metal utensils if required.

Once the toasting cycle is completed, the toasting lever and contents of the toasting slots will pop up.

**NOTE:**

This appliance is equipped with a lift-up function to assist in removing toasts from the toasting slots. Pull the toasting lever upwards to lift the toasts for easier removal.

Once you have finished using the appliance, remove the plug from the wall outlet.

**Do not immerse the toaster in water or any other liquid!**

# Functions

## Toasting function

- Place the bread slices into the toasting slots. Select the required browning level.
- If toasting/heating a toaster pastry, select the toaster pastry setting.
- Push the toasting lever down, until it locks in place. The toasting cycle begins.
- Once the toasting cycle is completed, the toasting lever and contents will pop up.

## Bagel function

Use the bagel function to toast bagels. Only the external heaters will be active if you select the bagel function (toast on one side)

### **NOTE:**

- Bagels must be cut in half. Do not force them into the toasting slots.
- When using the bagel function, place the inside of the bagel facing the outer sides of the appliance. Pay attention to the respective position of each bagel half in regard to each toasting slot.

## Frozen function

Use the FROZEN function to defrost and toast plain frozen toast or frozen bagels.

For bagels, please also refer to the Bagel function.

- Place the frozen bread slices into the toasting slots. Select the required browning level. Select the FROZEN setting.
- Press the toasting lever down
- Once the cycle is completed, the toasting lever and toasts will pop up and button light will turn off.

### **NOTE:**

When selecting the frozen pastry setting, the image will change from pop tart to toaster strudel.

# Troubleshooting

<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>
The appliance is not working	<ol style="list-style-type: none"> <li>1. Appliance not plugged in</li> <li>2. Wall outlet not energized</li> </ol>	<ol style="list-style-type: none"> <li>1. Insert the plug into the wall outlet</li> <li>2. Check fuses and circuit breaker</li> </ol>
The appliance heats up, but the display does not light up	Damaged indicator(s)	Disconnect the appliance from the wall outlet and contact qualified personnel to check and repair the appliance
The toasting lever is touched down but the appliance does not heat up	Malfunctioning appliance	Disconnect the appliance from the wall outlet and contact qualified personnel to check and repair the appliance
Toast/bagels are ejected very quickly	Toasting lever not locked in place	Press the toasting lever down until it locks in place. Ensure the appliance is connected to an energized wall outlet
Toast/bagels are not ejected once the function cycle is completed	<ol style="list-style-type: none"> <li>1. Damaged toasting lever</li> <li>2. Toast/bagels stuck in the toasting slots (torn/too thick/too large)</li> </ol>	<ol style="list-style-type: none"> <li>1. Disconnect the appliance from the wall outlet and contact qualified personnel to check and repair the appliance</li> <li>2. Disconnect the appliance from the wall outlet and allow it to cool down</li> <li>3. Remove toast/bagels with non-metal utensils</li> </ol>

<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>
The appliance produces an odor and/or emits smoke	<ol style="list-style-type: none"> <li>1. Residues from the production process are eliminated during first use.</li> <li>2. Food type not suitable for toasting</li> <li>3. Browning level is too high</li> <li>4. Malfunctioning appliance</li> </ol>	<ol style="list-style-type: none"> <li>1. Operate the appliance for at least twice on its highest setting, with no food, until no odor or smoke is present</li> <li>2. Touch the CANCEL Button to stop the cycle and remove the food from the toasting slots, using suitable non-metal utensils.</li> <li>3. Touch the CANCEL Button to stop the cycle and remove the toast/bagels from the toasting slots, using suitable non-metal utensils. Reduce the browning level for the next set</li> <li>4. Disconnect the appliance from the wall outlet and contact qualified personnel to check and repair the appliance</li> </ol>
Frozen bread/bagels/waffles are not toasted to the desired level	The FROZEN Button was not touched before the toasting cycle	Place the frozen bread, bagels or waffles into the toasting slots. Press the Toasting Lever down and then touch the FROZEN button to start a toasting cycle using the defrost function
Toasts are too light or too dark for the selected setting	Sugar, water and preservatives content influence the browning, each brand is different	Use the +3,5,10 seconds adjustment controls to increase the browning time and adjust to the browning label matching the reference toast picture.

# Cleaning and maintenance

Proper maintenance will ensure many years of service from your appliance. Clean the appliance after every use. The appliance contains no user serviceable parts and requires little maintenance. Leave any services or repairs to qualified personnel.

**WARNING: Always ensure the appliance is switched off. Disconnect the plug from the wall outlet before cleaning. Allow all parts of the appliance to cool down completely.**

## **NOTE:**

- Do not immerse the power cord with plug or appliance into water or any other liquids.
- Do not use abrasive cleaners, steel wool or scouring pads. Dry all parts thoroughly after cleaning, before using or storing the appliance. Ensure that no water enters the appliance housing. NEVER insert any object into the slots, especially metallic ones.
- Clean the surface of the appliance with a damp cloth or sponge and a mild detergent.
- Do not use metal utensils to remove lodged food, as this may result in personal injuries or damages.
- To clean the crumb tray, slide it out from the appliance completely. Dispose of any crumbs. Rinse the crumb tray with water and a little detergent. Dry thoroughly with a soft cloth. Reinsert the crumb tray carefully.

## **NOTE:**

Dry all parts and surfaces thoroughly before use. Make sure that all parts and surfaces are completely dry before connecting the appliance to a wall outlet.

## **Storage**

- Before storage, always make sure the appliance is completely cool, clean, and dry.
- The power cord can be stored in the cord's storage underneath the appliance.
- It is recommended to store the appliance in a dry place.
- Store the appliance on a stable shelf or in a cupboard. To avoid accidents, ensure that both the appliance and its power cord are beyond reach of children or pets.

# Warranty

If the appliance should become defective within the warranty period, please contact our Customer Service department for assistance in resolving your issue. Our Representatives are here to help troubleshoot and resolve the problem. If servicing is required, a Representative may confirm whether the product is under warranty and explain the process to file a warranty claim.

Our standard warranty period is 24 months from the date of purchase.

## **Innova Products Limited**

PO Box 4229  
Manawatu Mail Centre  
Palmerston North 4442  
New Zealand

**Phone:** 0800 100 345

**Email:** [nzinfo@innovaproductsltd.com](mailto:nzinfo@innovaproductsltd.com)

**SAA Approval #:** GMA-526010-EA



